


# Dealer Key Activation Procedure

---

To renew or change the dealer key, it is necessary to start the Dealer Activation Key procedure.


*Before starting the procedure, make sure that **the protection key is inserted into the PC**. Then follow the steps listed as below:*

- 1) Click on **Start Menu**
- 2) Click on **Pegasus CAD/CAM**
- 3) Click on **Dealer Activation Tool**

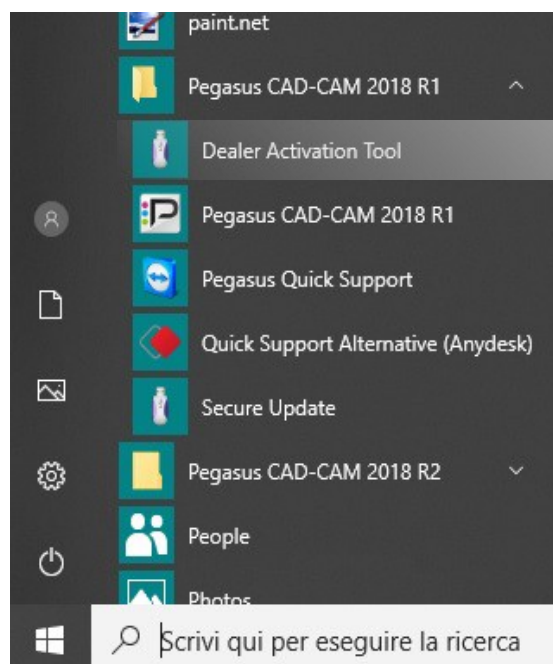

- 4) Click on **Create Request File** and save the file on Desktop


## Pegasus CAD-CAM – Dealer Key Activation

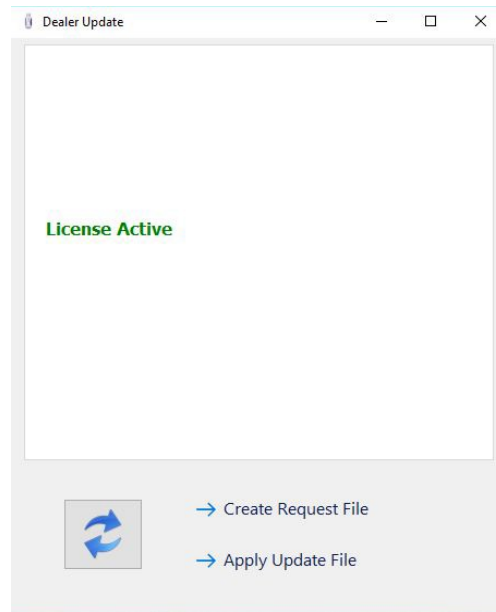

5) Send the generated file using the form on our site which can be reached at the following address <https://www.pegasuscadcam.com/en/support/> or, if requested by the support technic responsible for any open ticket, attach the file to the existing email

6) After receiving our activation file save it to the Desktop

7) Rerun the above steps 1-2-3 and load the file by using the button “Apply Update”

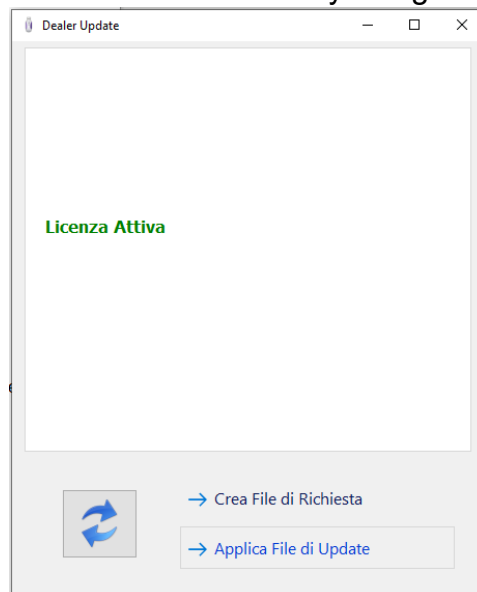

8) Wait a few seconds, if done correctly, the red-bordered pop-up will confirm that the Update was successful.